



## INSTRUCTION SHEET 07307

Part #: 926H  
Description: AS30 Drop Seeder Baffle Kit  
Date: 11/22/2023

### Instructions for Installing the AS30 Drop Seeder Baffle Kit

**-NOTE-**

*Please read through and become familiar with these instructions before beginning to install this kit.  
Do Not operate equipment with shields or guards removed.*

The following tools are required for installation of the AS30 Drop Seeder Baffle Kit p/n 926H.

- 1 - 9/16" socket and driver
- 1 - 9/16" wrench

1. Prepare the machine so there is easy and safe access to the work area. Stop the engine, remove the ignition key, wait for all moving parts to come to a complete stop and apply the parking brake. Disconnect the battery cables from the battery making sure to remove the negative (black) cable first followed by the positive (red) cable. Maintain all safety related work procedures. Always wear eye and hand protection
2. Remove two (2) 3/8-16 x 1-3/4" hex head bolts and two (2) 3/8-16 serrated flange nuts used to secure the bumper to the hopper assembly. Retain the serrated flange nuts for reuse in the following step. See Figure 1.
3. Replace the 3/8-16 x 1-3/4" hex head bolts removed in the previous step with two (2) 3/8-16 x 2" hex head bolts included with this kit. Secure this hardware with the 3/8-16 serrated flange nuts removed in step 2. See Figure 1.




Figure 1. Remove & Replace Hardware



## INSTRUCTION SHEET 07307

**Part #:** 926H  
**Description:** AS30 Drop Seeder Baffle Kit  
**Date:** 11/22/2023

4. Position the baffle inside the hopper and install it onto the exposed threads of the 3/8-16 x 2" bolts installed in the previous step. Secure the baffle to the bolts using two (2) 3/8-16 poly knobs supplied with this kit. See Figure 2.

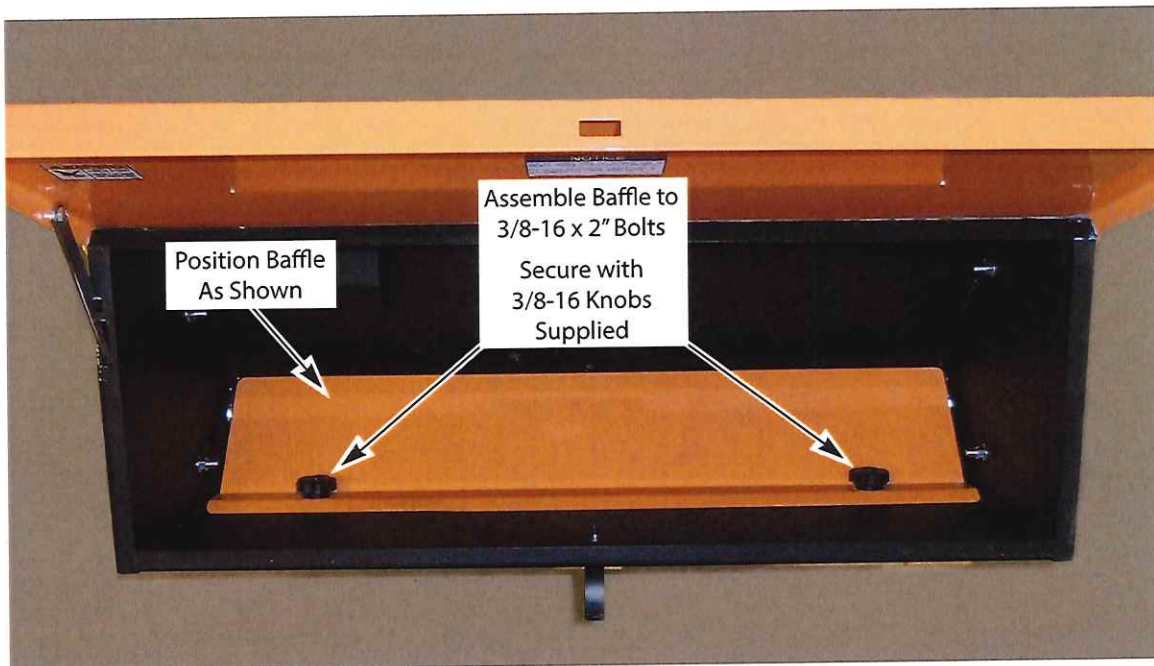

**Figure 2. Install and Secure Baffle**

4. Reconnect the battery cables to the battery making sure to attach the positive (red) cable first followed by the negative (black) cable.
5. Operate and test the machine.